


Laser Alignment Tool

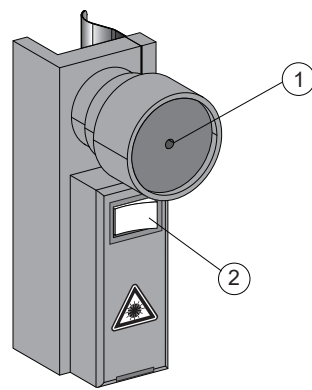

1	Laser beam
2	Switch ON/OFF



CLASS 2 LASER PRODUCT
(DIN EN 60825-1)

Divergence angle < 0.5 mrad
Wavelength λ = 650 nm

Limit of radiant power pulse P_p = 1 mW


 **WARNING**


HAZARD OF LASER RADIATION EXPOSURE

- Do not stare into the beam.
- Do not operate below - 20 °C (- 4 °F)
- Follow all operating instructions.

Failure to follow these instructions can result in death, serious injury or equipment damage.

Battery (placing or replacing)

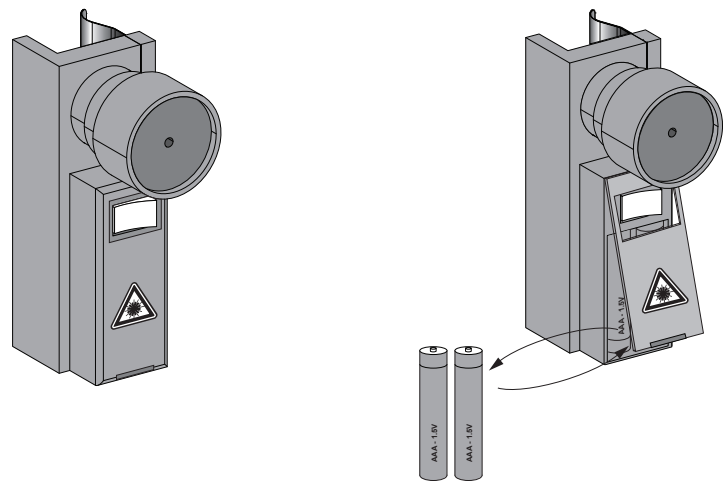

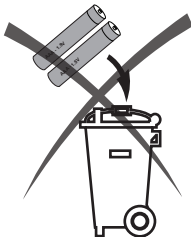






 Our products should be installed, operated, serviced, and maintained only by qualified personnel. Neither TMSS France nor any of its subsidiaries or other affiliated companies shall be responsible or liable for any consequences arising out of the use of this material.

Telemecanique™ Sensors is a trademark of Schneider Electric Industries SAS used under license by TMSS France. Any other brands or trademarks referred to in this document are property of TMSS France or, as the case may be, of its subsidiaries or other affiliated companies. All other brands are trademarks of their respective owners.

Manufacturer :
TMSS FRANCE
Tour Eqho, 2 avenue Gambetta
92400 Courbevoie – FRANCE

© 2024, TMSS France, All Rights Reserved

Installation and Use

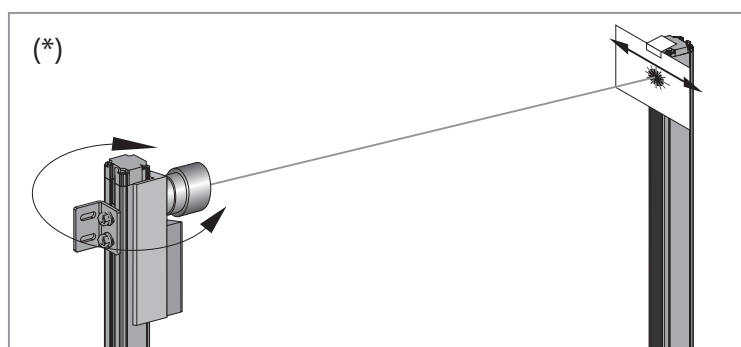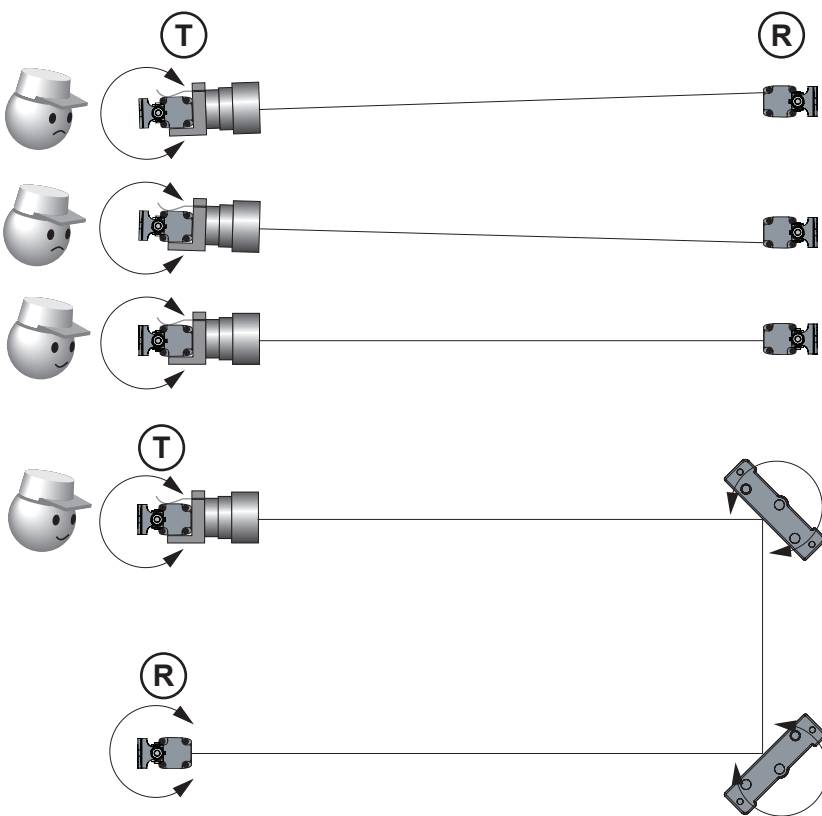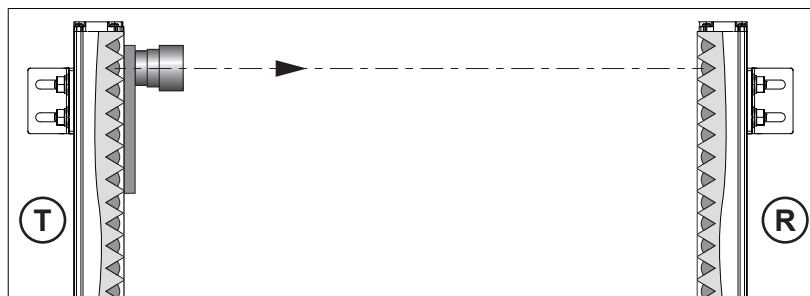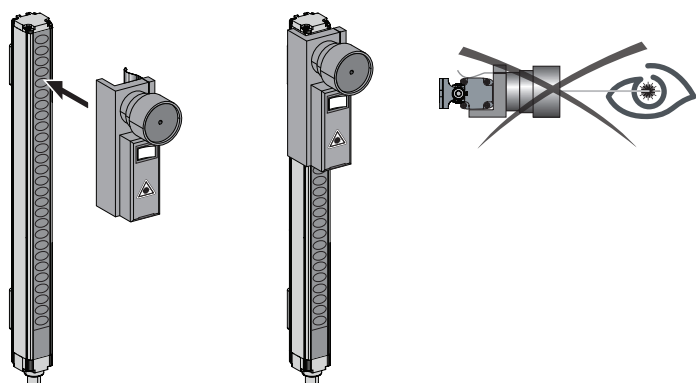

Clip the alignment tool to the housing of the transmitter or receiver unit.

Position the alignment tool over the top or first beam of the light curtain unit and adjust the position of the light curtain as required until the laser beam points at the corresponding spot on the other device in the pair.

Move the laser alignment tool over the bottom or last beam of the light curtain unit and adjust the beam as required. Repeat the procedure if necessary.

(*) For the initial alignment, use a target that is larger than the width of the receiver. This allows you to more easily detect deviations at the sides.