


Flash the Qr-code to
access the complete
User Manual and this
Instruction Sheet in
different languages.




http://qr.tesensors.com/XU0006


①	Column
②	Top plate with spirit level
③	Base plate

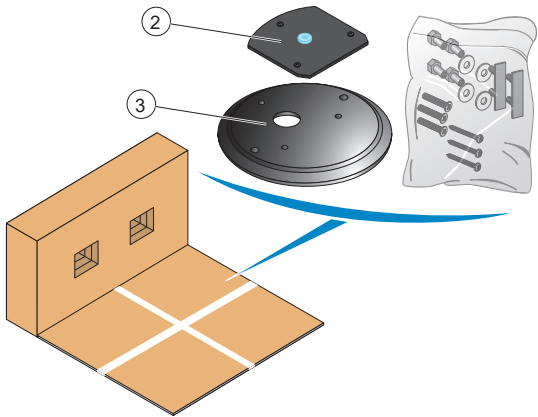



Column installation and adjustment

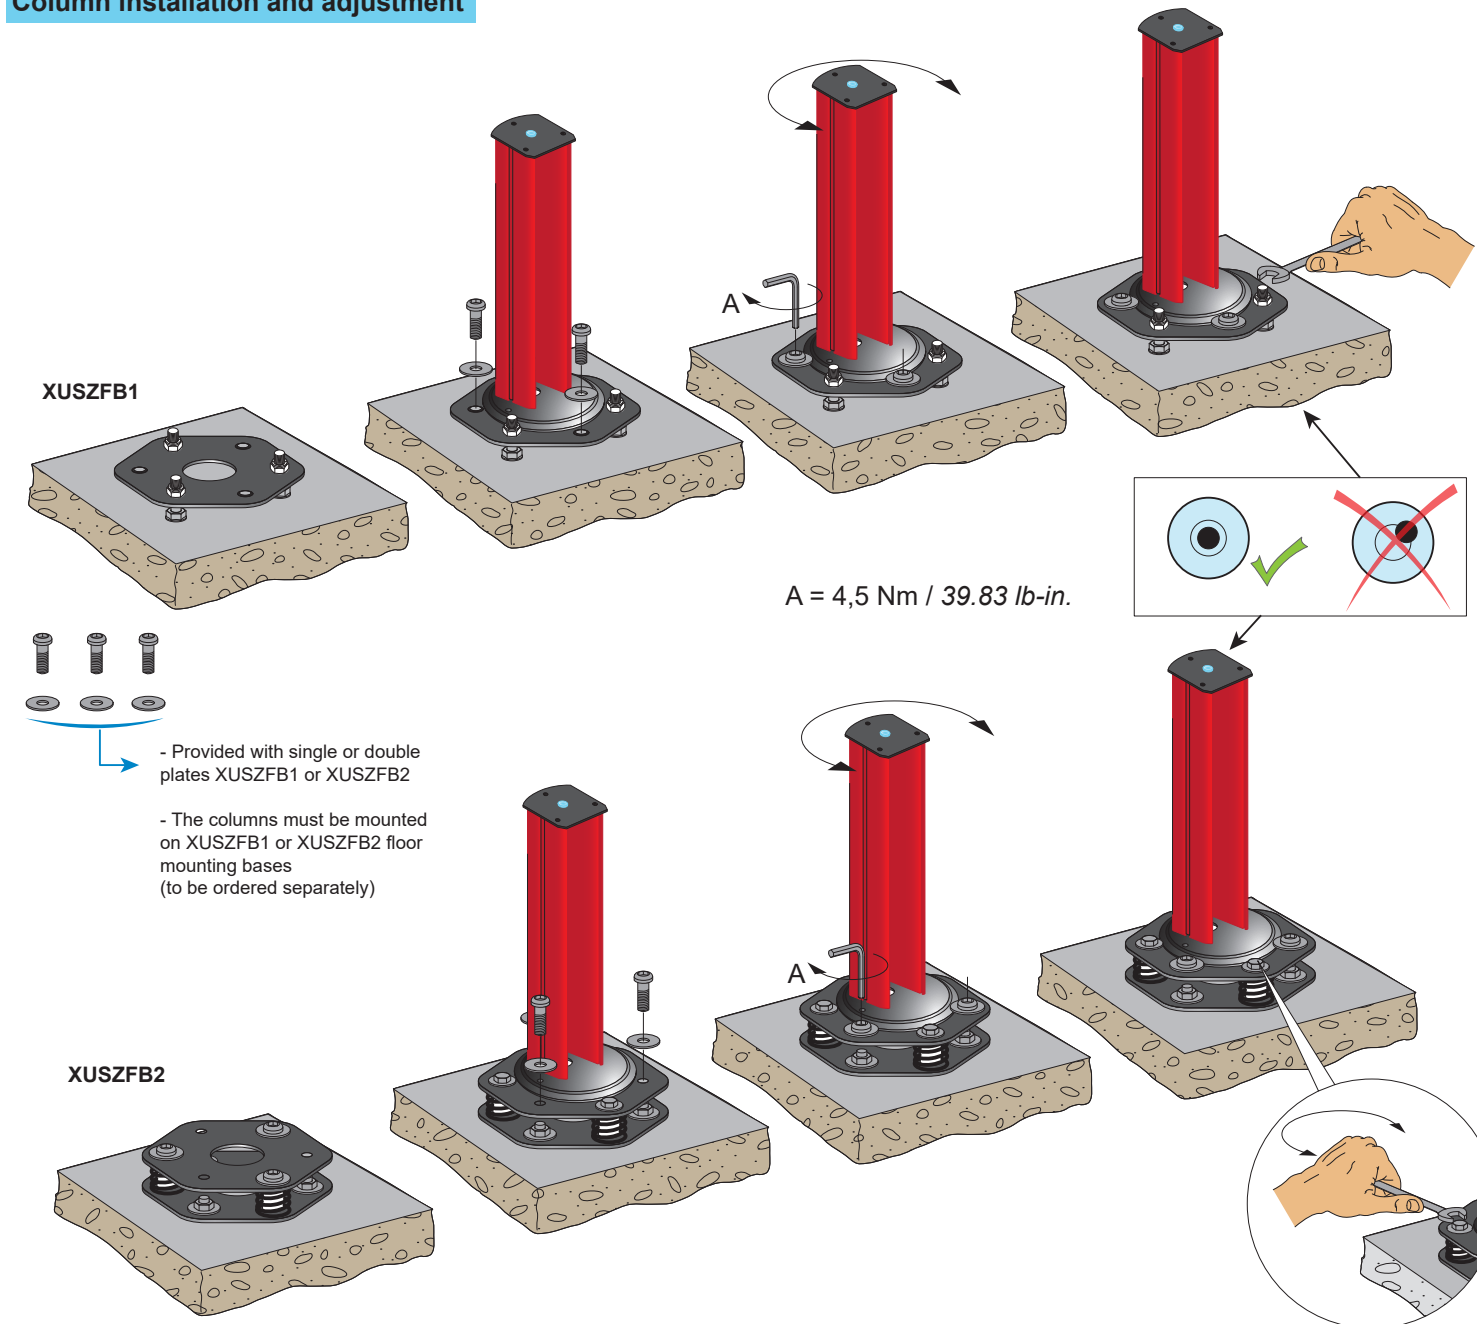


Base plate fixing

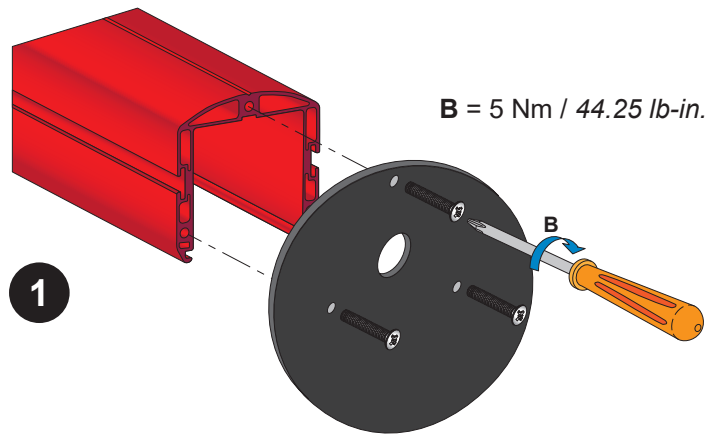


Provided with the column (XUSZSM)

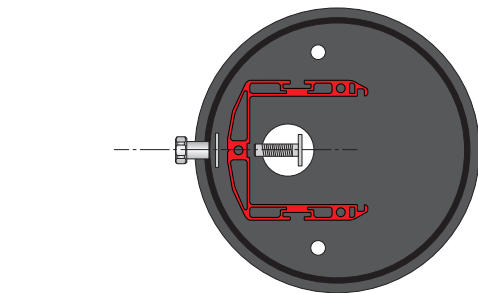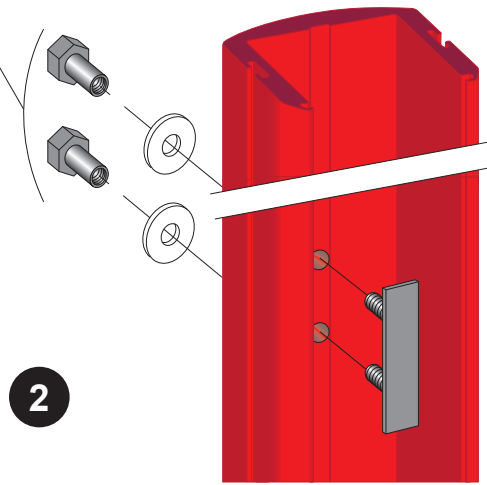


Top plate (with spirit level) fixing

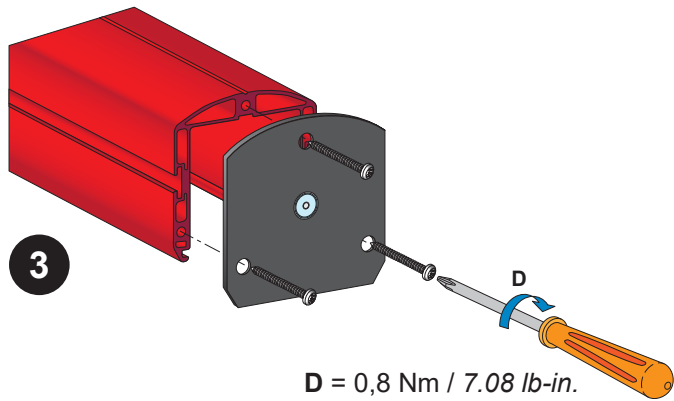


Arms mounting on the column

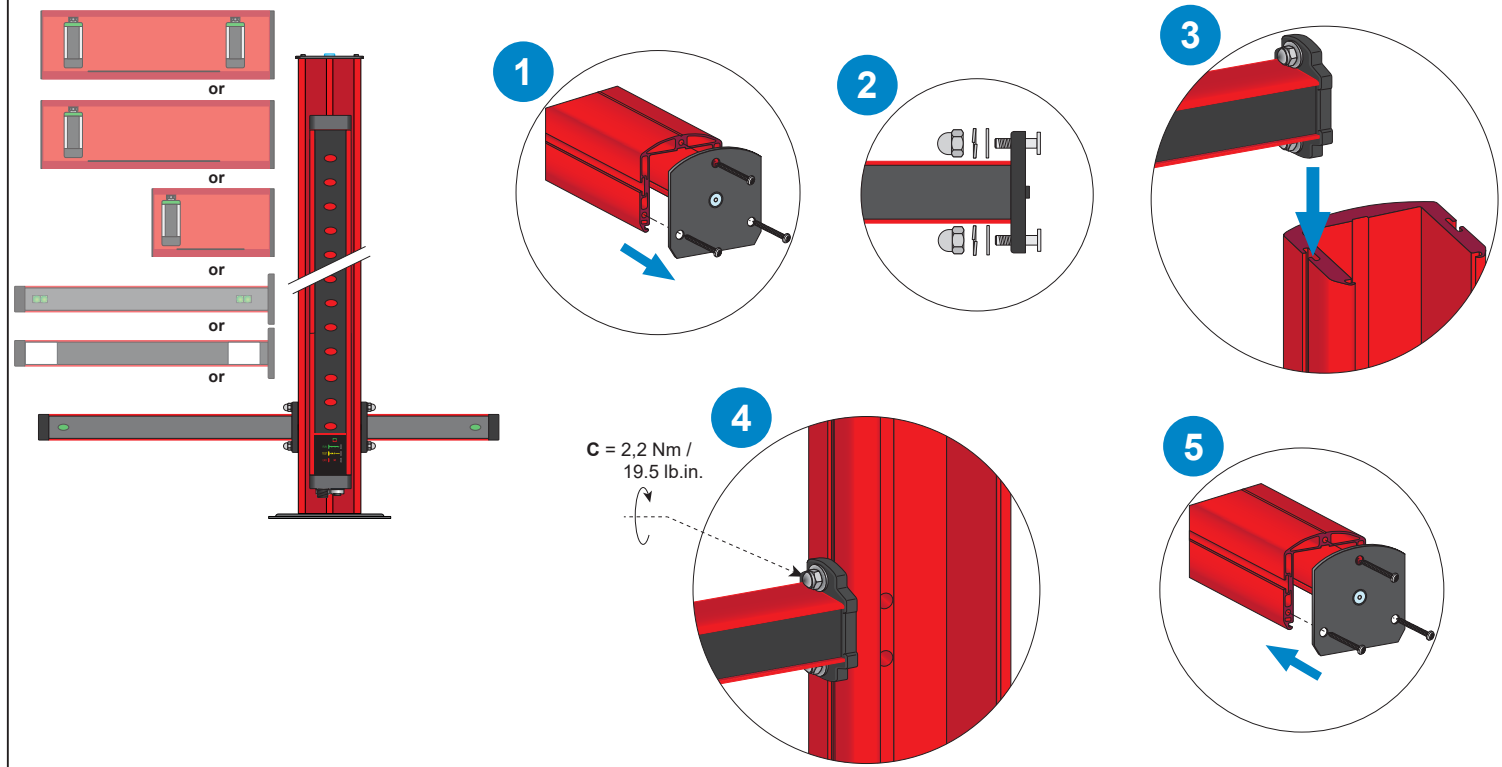



Dimensions

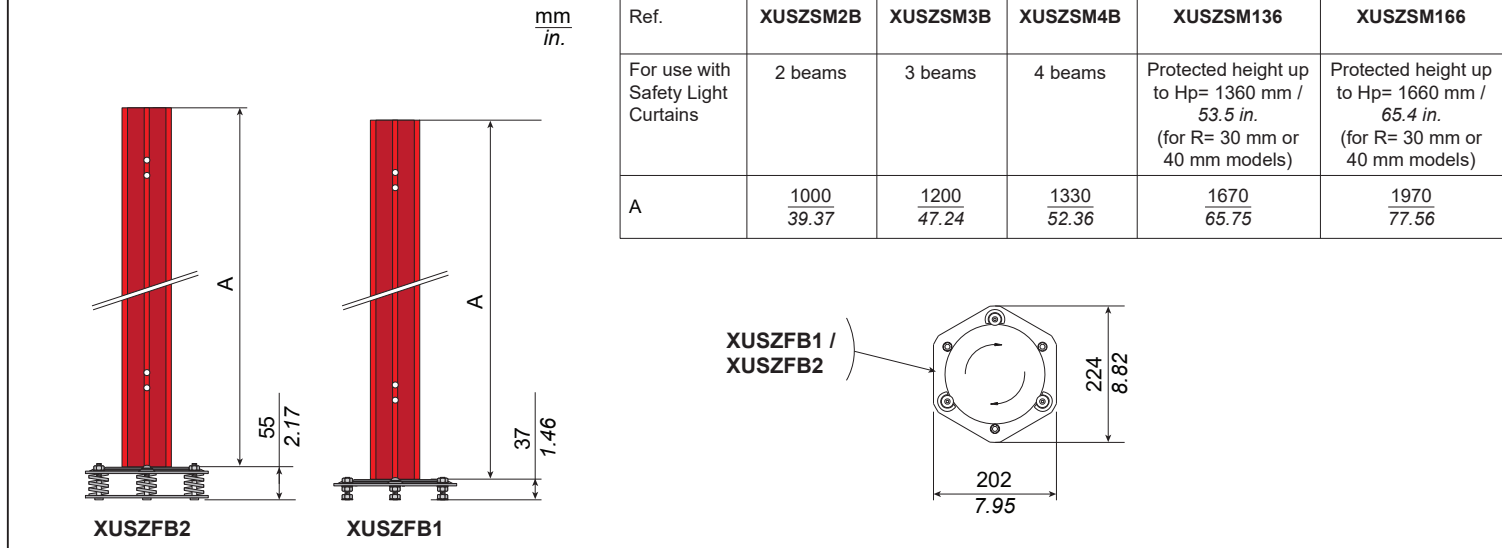


Distance between the first beam and the floor (H) (According to ISO 13855)

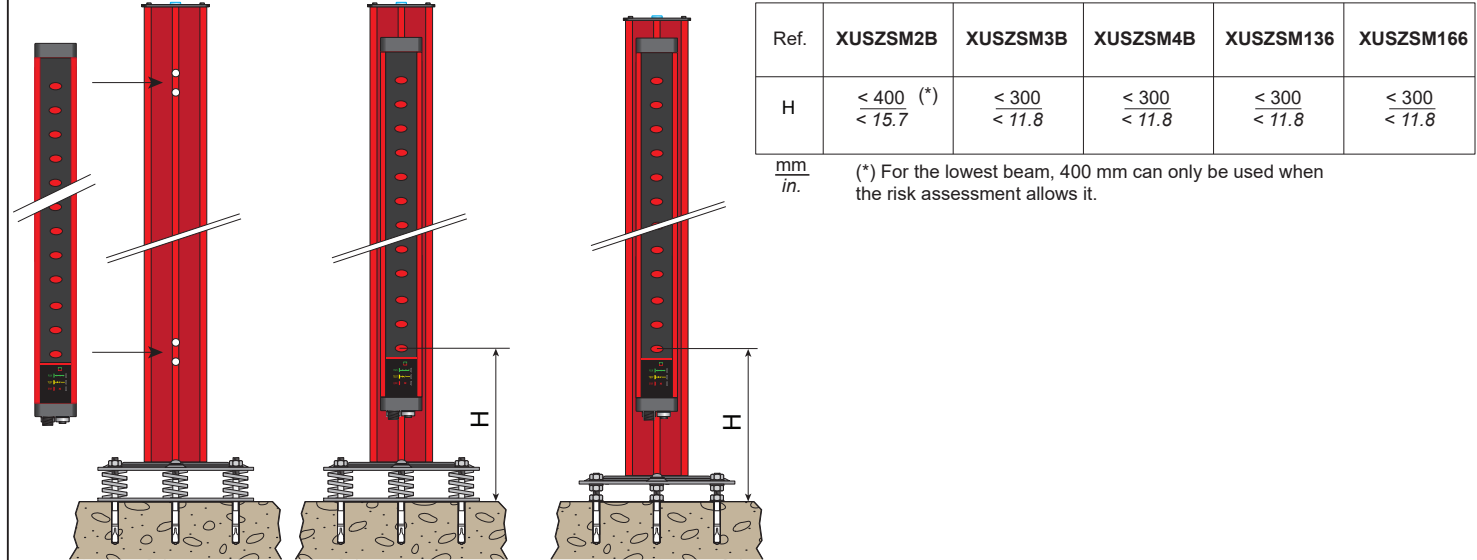

Transmitter and receiver alignment

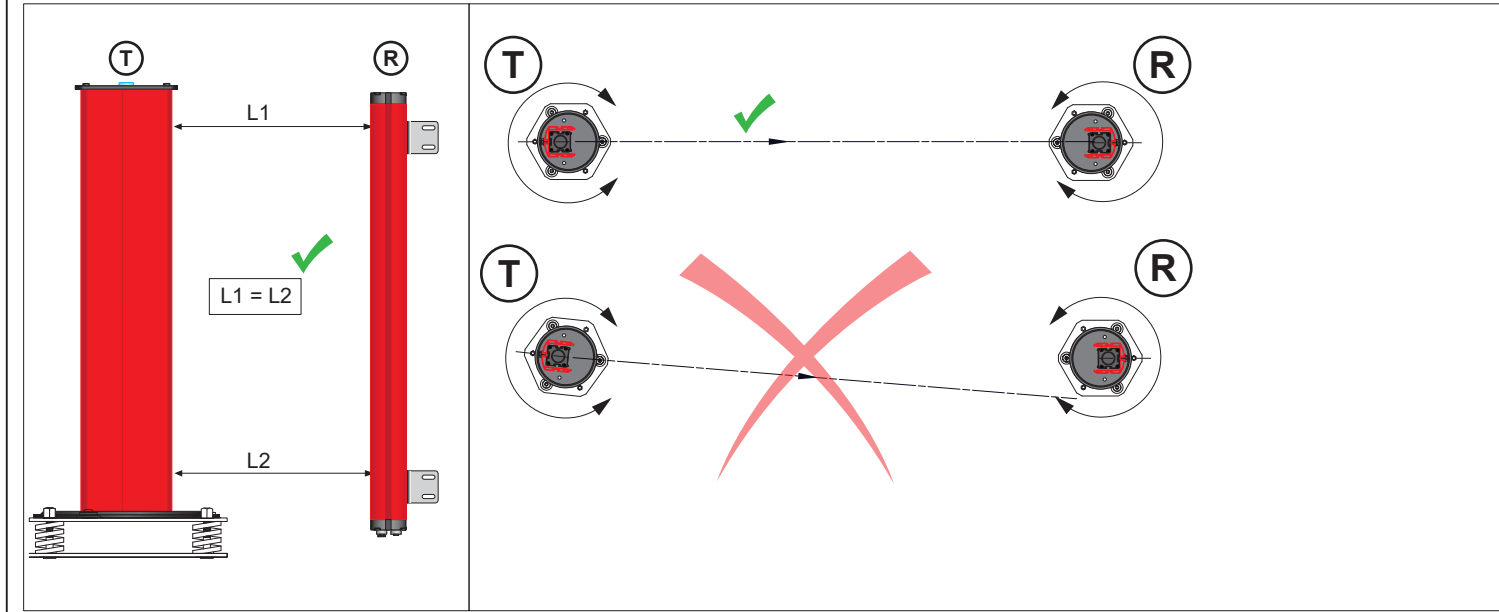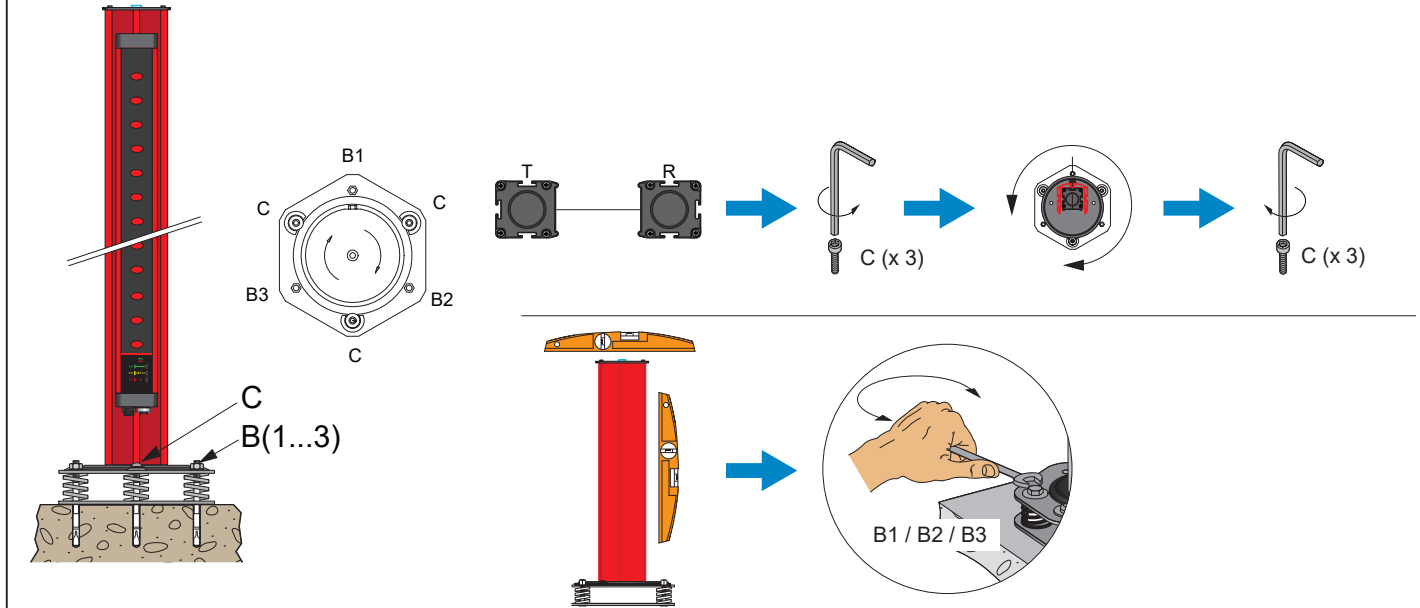

Cable routing

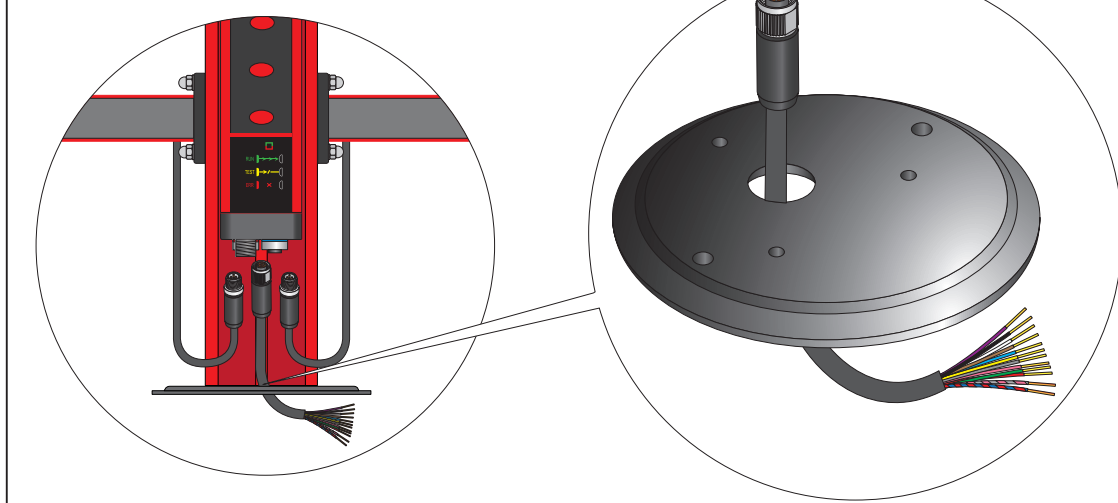

Our products should be installed, operated, serviced, and maintained only by qualified personnel. Neither TMSS France nor any of its subsidiaries or other affiliated companies shall be responsible or liable for any consequences arising out of the use of this material.

Manufacturer :

TMSS FRANCE

Tour Eqho, 2 avenue Gambetta
92400 Courbevoie – FRANCE

Telemecanique™ Sensors is a trademark of Schneider Electric Industries SAS used under license by TMSS France. Any other brands or trademarks referred to in this document are property of TMSS France or, as the case may be, of its subsidiaries or other affiliated companies. All other brands are trademarks of their respective owners.